

Limited Warranty Information

Thank you for choosing an Alpine product! We aim to please with our wide range of products including Fountains, Birdbaths, Statuary, Pond Supplies & More. All of our products are constructed from the highest quality materials. In the event that we have not achieved our usual standard of excellence, we will repair or replace, at our discretion, within the warranty period. A valid proof of purchase, with the purchase date clearly indicated, must be provided. Photos of defective merchandise will also be required to help distinguish the actual cause of the defect. Please read below for a detailed description of warranty coverage.

Water Damage

Alpine products are not manufactured to withstand extreme temperatures. Improper storage that allows water to freeze within a product may cause damage and is considered negligence and will, therefore not be covered under this warranty. The use of "hard water" and/or caustic cleaners can affect the paint or other finishes. Failure to keep the unit clean, and use of such additives/cleaners, will also void the warranty. Please note: for fountains, it is normal for some splashing to occur and protecting the immediate surfaces is not the responsibility of Alpine Corporation

Paint & Color (Retention and/or Loss)

The use of water will cause natural erosion to the color. This area can be touched up using standard paint. The paint is designed to protect the entire finish against breakdown of color. As with any product, all finishes with time will gradually fade and discolor. The warranty will only cover against severe or complete fading within the first year from date of purchase with the above exclusion.

Procedure/Service

Should a warranty/claim be needed, you should contact the retailer from whom you purchased the product. If that is not an option, you can contact Alpine Corporation at www.alpine4u.com. When contacting Alpine Corporation, you must be prepared to show proof of purchase, provide photographs and any other information needed to validate your claim. This may be necessary to distinguish between a partial or complete replacement of a defective product. The warranty does not cover any items with multiple parts; the warranty will ONLY cover the individual component of the unit/item that may be defective. Replacement parts can be made available to a consumer through the original selling party, or an approved parts retailer. If this is not an option, contact our customer service department.

Not Covered Under Warranty

The limited warranty will NOT cover cases of damages due to

1. Damages caused in Transit
2. Inadequate care and/or neglect
3. Environmental and/or natural elements
4. Immersion in water, unless specified
5. Improper Installation/Storage and/or Maintenance

This warranty is void if the product has been damaged by accident, misuse, negligence, improper installation and/or modifications have occurred. This includes any and/or all defects arising out of freezing water damage, hard water damage, failure to keep the unit clean and free of harmful additives such as bleach, chlorine, etc.... which affects the paint and/or parts. This warranty also does not cover any additional charges or installation, removal, disposal and/or shipping costs or consequential damage associated with any warranty claim



WIN270S Alpine's Rain Forest Waterfall Edition




This product is protected by U.S. Patent # D643,504 S

Assembling & Using Your Product

Unpack all components carefully. Please check to ensure all parts have been removed from the packaging. Some splashing may occur.

Components:

Fountain
Pump
Transformer
LED Lights
Back Cover

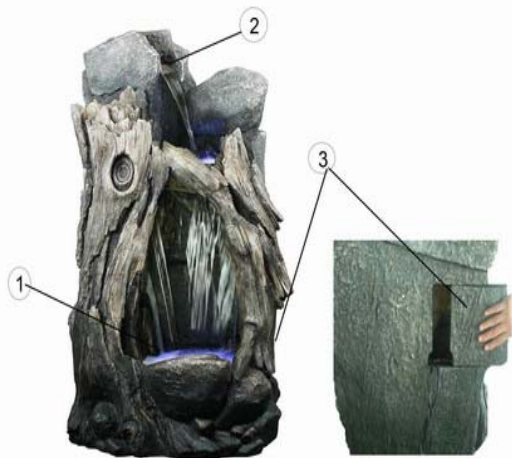

Assembling:

Place the fountain on a smooth and level surface.

Pull out the LED light cords through the side opening and connect to the transformer.

Connect the vinyl tubing into the pump; adjust the flow control to the lowest setting to avoid splashing until the fountain is completely assembled. Place the pump back into the reservoir. Slide back cover into place.

Gently pour water into the fountain, being careful not to overflow and cause splashing. (Fill the water in the area #1 shown above)

Make sure the water completely submerges the pump and the water runs clear during operation. Plug pump cord and transformer into your local power supply. Make sure that there is no water around the plugs and always keep the power source in a dry place.

- NOTE: We recommend that you use distilled water to prevent scale build-up. The first time you operate the pump, it can take up to 5 minutes for the air to be completely expelled and water begins to flow properly.

Trouble Shooting & Caution

If you have any questions and/or problems, please contact the retail store you purchased this fountain.

If your pump fails to run

Check the circuit breaker or try a different outlet to make sure the pump is receiving electrical power.

Check the pump discharge and tubing for any kinks and/or obstructions

Any buildup obstructing the water flow can be flushed with a garden hose

Check the rotor by removing the front cover and plate to access the impellor area. Turn the rotor and make sure that the rotor is not jammed or broken

If your pump “spews”

Check the water level to make sure the pump is completely submerged and there is enough water in the basin to operate your fountain. Not having enough water will cause your pump to spew

If your pump is making abnormal loud noises

Disconnect the pump from the electrical power supply and remove the front cover and plate

Carefully grip the impellor and gently pull the impellor/rotor assembly out of the pump housing

Rinse the impellor/rotor assembly and clean the cavity with clean water. If breakage or damage is found, contact your local retailer for parts



Caution

- **Always unplug the pump from the electrical outlet before cleaning and handling**
- **Use with clean water only. Do not place the fountain and/or parts in any other liquid.**
- **Periodically change the water and clean the pump to keep free from micro-organisms**
- **Disconnect and store the unit in a dry place if not in use for an extended period of time**
- **Do not operate with water above 90°F or 30°C**
- **Do not lift, carry or pull the pump by the power cord**
- **Do not exceed the maximum voltage & wattage on transformer**
- **NEVER LET THE PUMP RUN DRY**